 


# Start Here

## Epson Stylus® Photo R1900

 
1

### Unpack

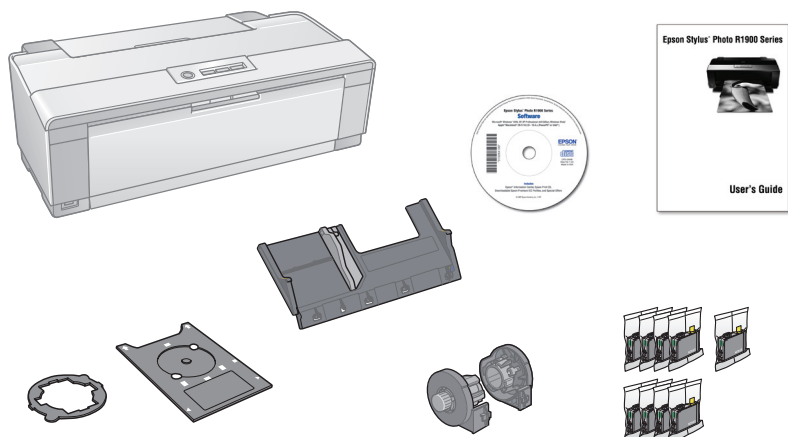

If anything is missing, contact Epson® as described on the back.

Remove all the tape and packing material. (There is more tape on the printer than is shown below.)

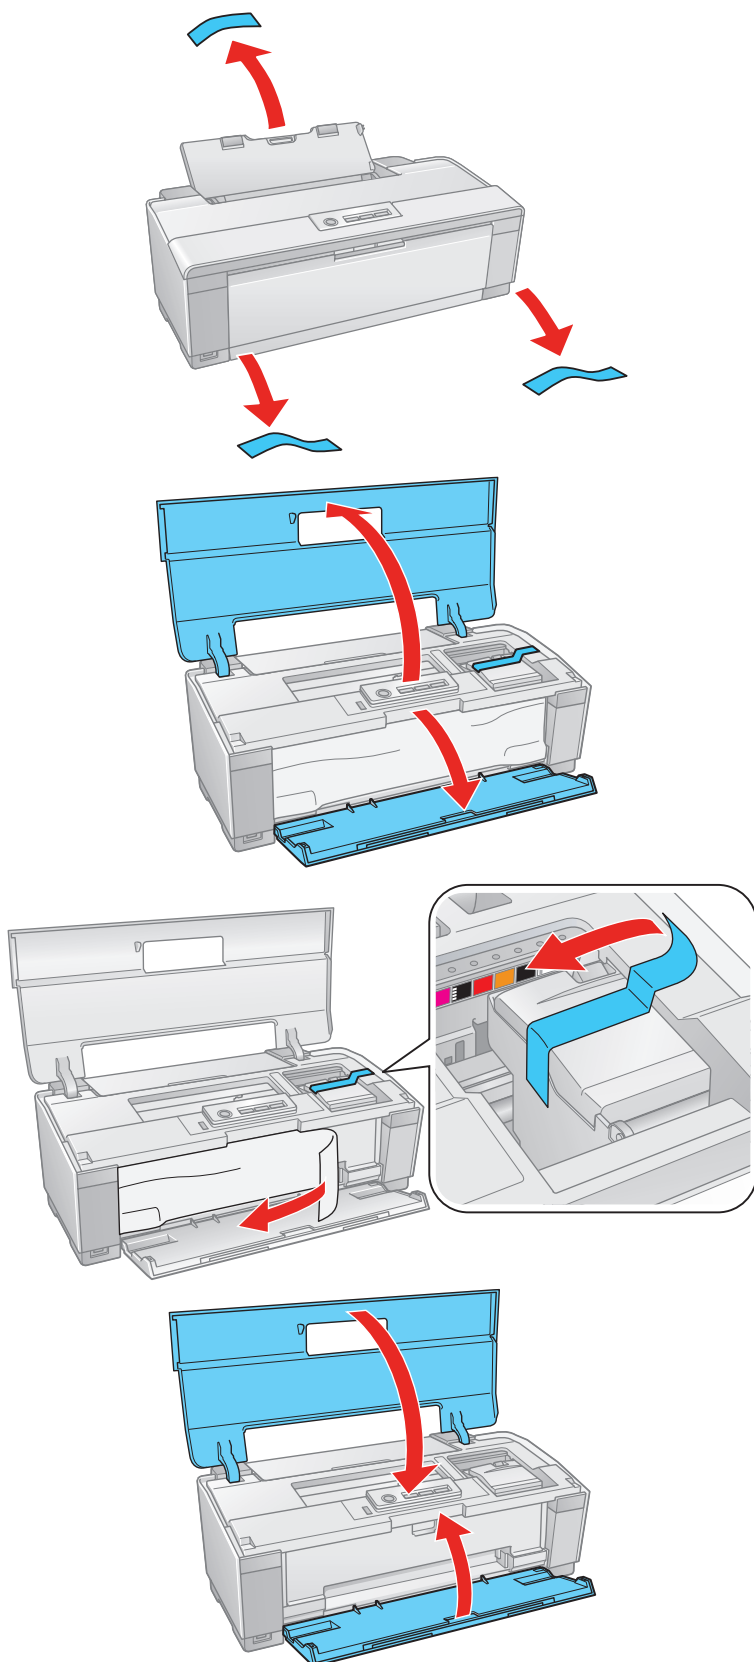


\*411086800\*

**EPSON®**  
EXCEED YOUR VISION


## 2
 
## Turn on the power

- 1 Connect the power cable.

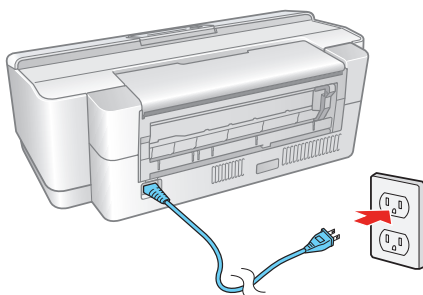

- 2 Press the power button.

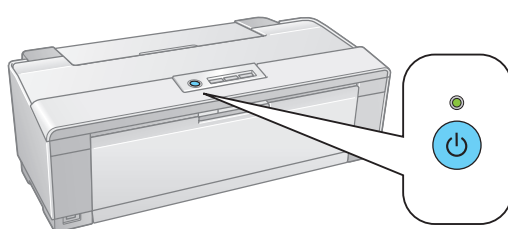 


## 3

## Install ink cartridges

**Caution:** Do not open an ink cartridge package until you are ready to install the ink. Cartridges are vacuum packed to maintain reliability.

Don't load paper before installing ink cartridges.

 
- 1 Open the printer cover, then open the cartridge cover.

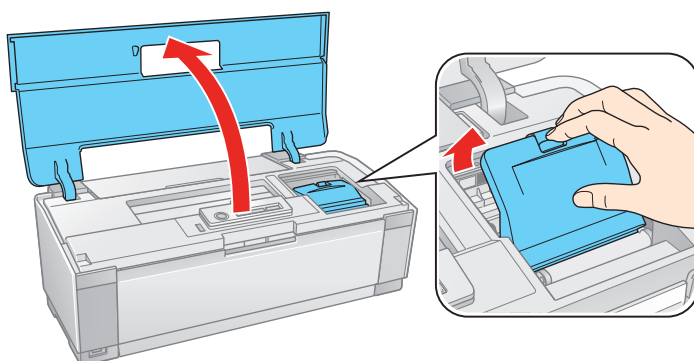


- 2 Shake the ink cartridges. (All cartridges except the gloss optimizer cartridge make a clicking sound when you shake them.)



 - 3 Unpack the ink cartridges.

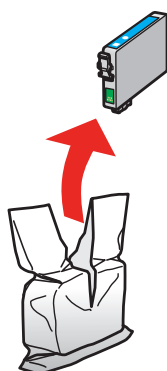

 
- 4** Remove only the yellow tape from each cartridge.

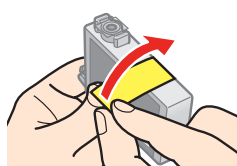


**Caution:** Don't remove any seals from the cartridge or ink will leak.



 
- 5** Insert the cartridges in the holder for each color.

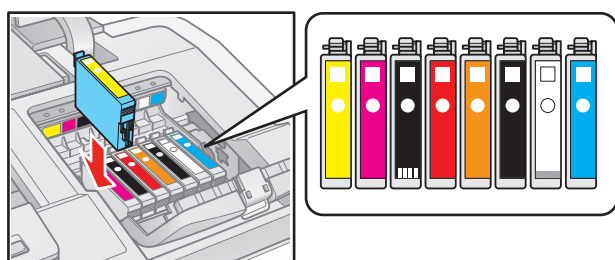

   
- 6** Press the cartridges down until they click.

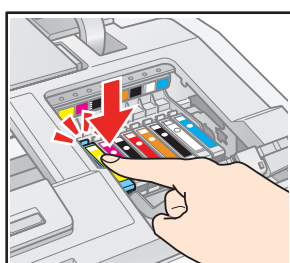


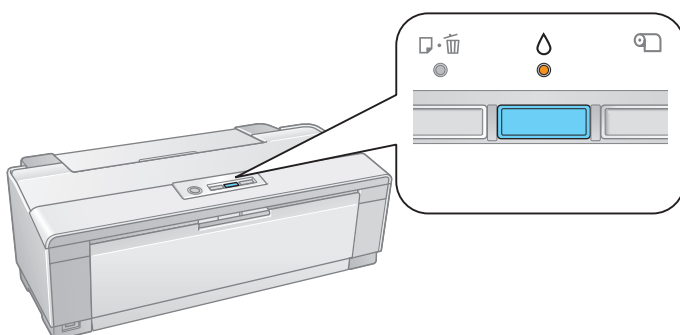 
- 7** Close the cartridge cover and press it down until it clicks.

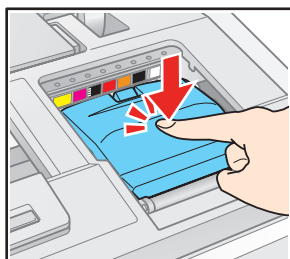


- 8** Close the printer cover.

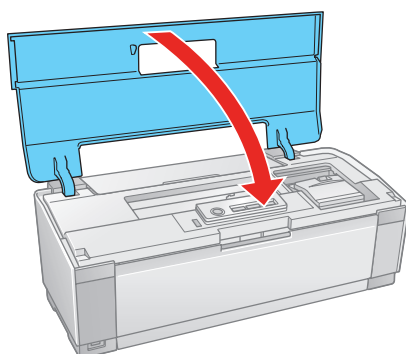

- 9** Press the  ink button to charge the ink. Charging takes about 3 minutes.



**Caution:** To conserve ink, don't turn off the printer while the  power light is flashing.


# 4
 
## Load paper


### Sheet feeder

You can load plain paper, and most glossy and matte papers, in the sheet feeder.


- 1 Open the paper support and pull up the extensions.

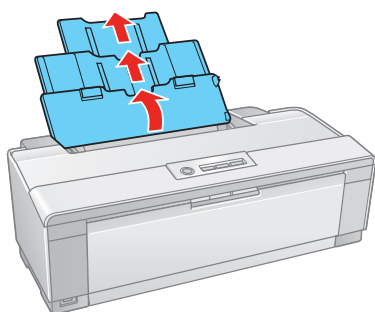

 - 2 Open the output tray and pull out the extensions.

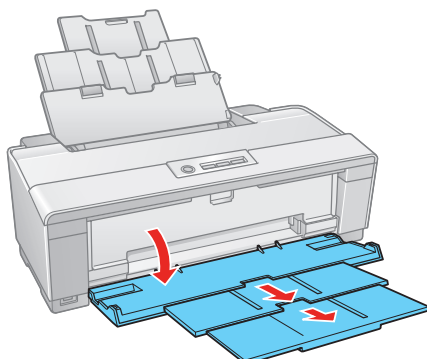

 - 3 Load paper against the right edge and behind the tab. Then slide the edge guide over.

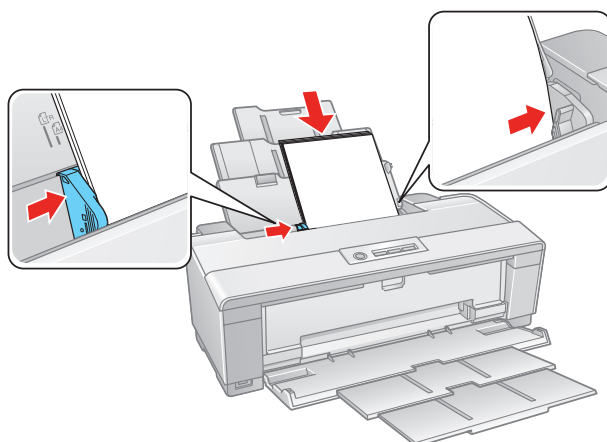

**Note:** Don't load the paper sideways. Always load it short edge first.




### Manual feed slot

 You can print on these paper types using the single sheet guide and the manual feed slot:


- Epson Velvet Fine Art Paper
- Epson Watercolor Paper Radiant White
- Epson UltraSmooth® Fine Art Paper 250 gsm
- PremierArt™ Matte Scrapbook Photo Paper for Epson

- 1 Remove any paper from the sheet feeder and close the paper support.


- 2 Open the output tray and pull out the extensions.

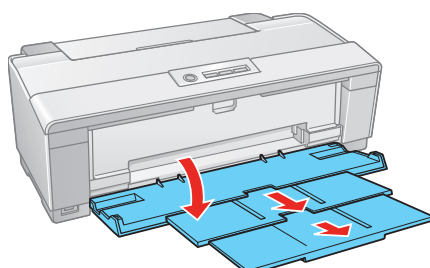

 - 3** Slide the roll paper edge guide on the back of the printer all the way to the right.

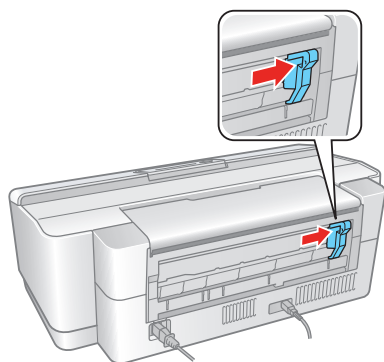


 - 4** Attach the single sheet guide by aligning the notches on its base with the slots on the back of the printer. Then hook the tabs over the top of the slot (marked with orange triangles).

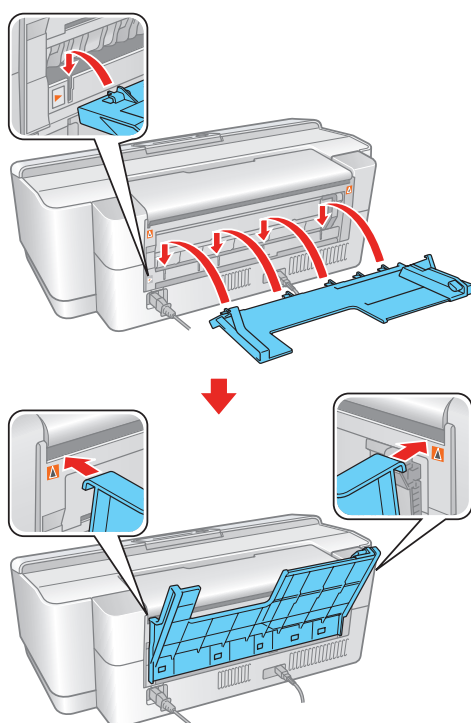


- 5** Turn on the printer so it can load the paper correctly.

 - 6** Insert one sheet of paper against the right edge, then slide the edge guide over.

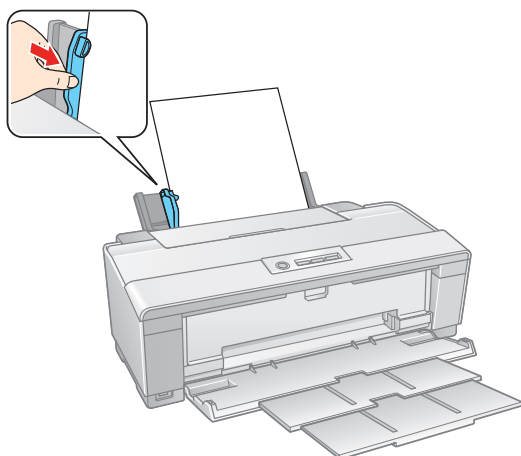

**Note:** Don't load paper sideways. Always load it short edge first.

 - 7** Push the paper into the printer until it meets resistance and hold it there until the printer pulls it in slightly. When the printer begins feeding the paper, let go of it.

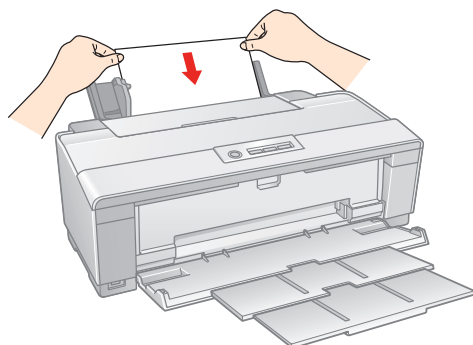

**Note:** For instructions on loading roll paper, or a CD or DVD, see the *User's Guide* or your on-screen *Reference Guide*.


# 5
 
## Install software


Your software works with Windows® 2000, XP, XP Professional x64 Edition, and Windows Vista®, and **Macintosh® OS X 10.3.9 to 10.4.x.**

### Windows

- 1 Make sure the printer is **NOT CONNECTED** to your computer.

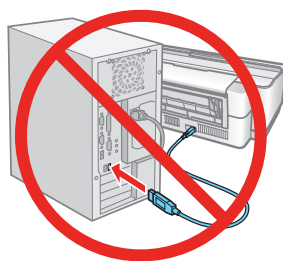


 **Note:** If you see a Found New Hardware screen, click **Cancel** and disconnect the USB cable. You can't install your software that way.

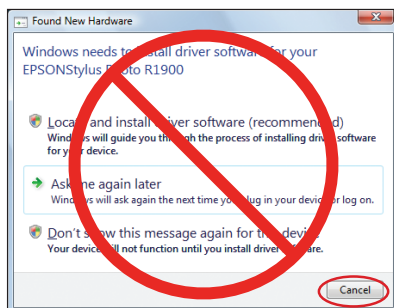

- 2 Insert the **Software CD**.

 With Windows Vista, if you see the AutoPlay window, click **Run Esetup.exe**. When you see the User Account Control screen, click **Continue**.

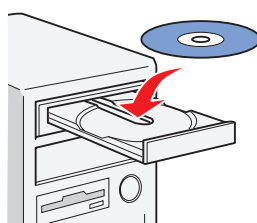

- 3 Click **Install** and follow the on-screen instructions.

 


- 4 When you see this screen, click the first option and click **Next**, *unless* the printer is connected to your computer through an external print server.

If you're using an external print server, click the second option, click **Next**, and skip to step 6.



- 5 When prompted, connect the USB cable to any open port on your computer and then to one of your printer's USB ports.

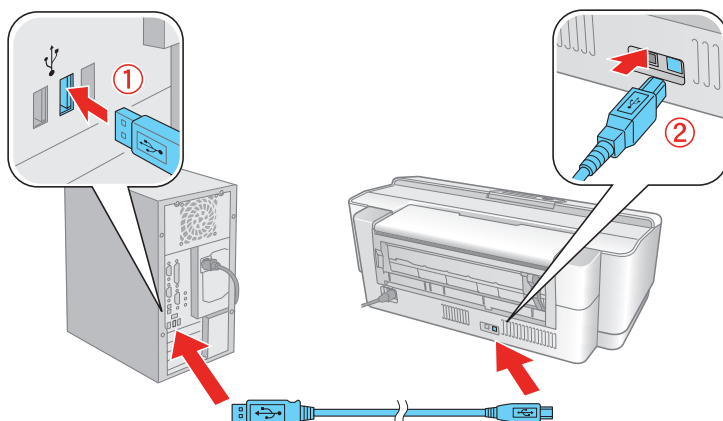


**Note:** If installation doesn't continue after a moment, make sure the printer is securely connected and turned on.

- 6 Follow the on-screen instructions to install the rest of the software.
- 7 When you're done, remove the CD.

You're ready to print!

# Macintosh

 
- 1 Insert the Software CD.

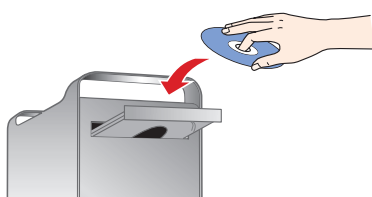


- 2 Double-click the **EPSON Epson** icon.
- 3 Click **Install** and follow the on-screen instructions.



 - 4 When prompted, connect the USB cable to any open USB port on your Macintosh and then to one of the printer's USB ports. Make sure the printer is securely connected and turned on.

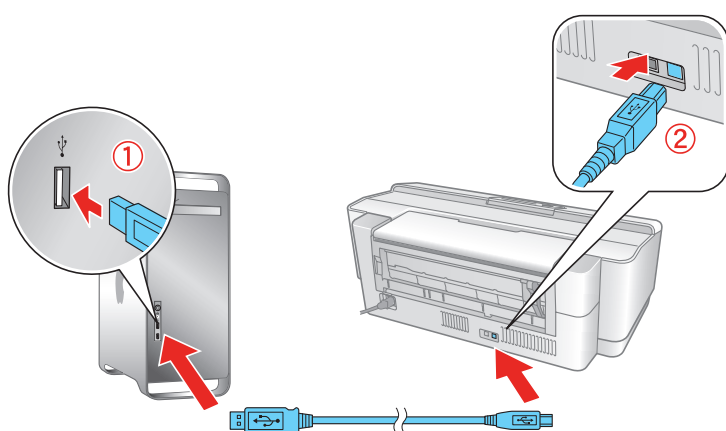

 - 5 When you see this screen, click **Open the Printer List**.

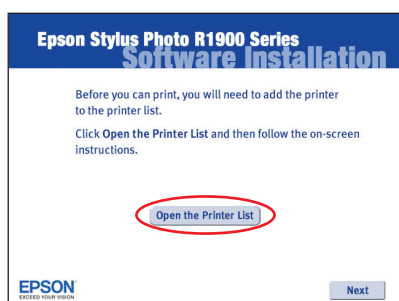

- 6 Follow the steps on the right of the screen to add the R1900 Series.



- 7 Click **Next** again, if necessary.
- 8 Follow the on-screen instructions to install the rest of the software.
- 9 When you're done, eject the CD.

You're ready to print!



# Any questions?

 
## User's Guide

Instructions for loading paper, printing, maintaining your printer, and solving problems.



## Epson Information Center

Click the desktop shortcut for easy access to the Epson Stylus Photo R1900 Reference Guide, FAQs, and software downloads. You can also purchase paper and ink.

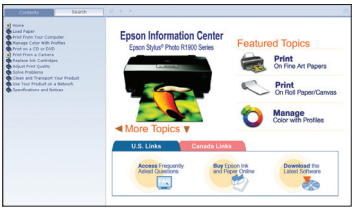

## On-screen help with your software

Select **Help** or **?** when you're using your software.

## Epson Technical Support

### Internet Support

Visit Epson's support website at [epson.com/support](http://epson.com/support) and select your product for solutions to common problems. You can download drivers and documentation, get FAQs and troubleshooting advice, or e-mail Epson with your questions.

### Speak to a Support Representative

Call (562) 276-7296 (U.S.) or (905) 709-2567 (Canada), 6 AM to 6 PM, Pacific Time, Monday through Friday. Days and hours of support are subject to change without notice. Toll or long distance charges may apply.

# Need paper and ink?

Want great results? Simple. Use genuine Epson paper and ink. For the right supplies at the right time, you can purchase them at Epson Supplies Central<sup>SM</sup> at [www.epson.com/ink3](http://www.epson.com/ink3) (U.S. sales) or [www.epson.ca](http://www.epson.ca) (Canadian sales). You can also purchase supplies from an Epson authorized reseller. To find the nearest one, call 800-GO-EPSON (800-463-7766).



### Premium Photo Paper Glossy

Water-resistant paper with a high gloss finish that looks and feels just like a traditional photo. Perfect for all photographic applications.



### Ultra Premium Photo Paper Luster

This instant drying RC photo paper produces vivid, lifelike images that rival those of traditional silver halide prints. Its semigloss "E" surface and 10 mil thickness provide a true photographic look and feel.

## Genuine Epson inks

Look for the numbers below to find your cartridges. It's as easy as remembering your number!

**87** 87 Photo Black

**87** 87 Magenta

**87** 87 Matte Black

**87** 87 Orange

**87** 87 Cyan

**87** 87 Yellow

**87** 87 Red

**87** 87 Gloss Optimizer

Epson and Epson Stylus are registered trademarks, and Epson Exceed Your Vision is a trademark of Seiko Epson Corporation. Supplies Central is a service mark of Epson America, Inc. General Notice: All other trademarks are the property of their respective owners. The contents of this manual are subject to change without notice.

© 2007 Epson America, Inc. 11/07

CPD-24044

Cut out the card to the right and keep it with you when purchasing replacement ink cartridges.

### Epson® R1900 Ink Cartridges

<b>87</b> 87 Photo Black	<b>87</b> 87 Magenta
<b>87</b> 87 Matte Black	<b>87</b> 87 Orange
<b>87</b> 87 Cyan	<b>87</b> 87 Yellow
<b>87</b> 87 Red	<b>87</b> 87 Gloss Optimizer